


Installation Guide


Unmanaged Industrial/Hardened PoE Switch

WI-PS302GF-I / WI-PS306GF-I / WI-PS310GF-I / WI-PS305G-I-DC
WI-PS206-I / WI-PS208-I / WI-PS206GF-I / WI-PS212GF-I

1. Package Content

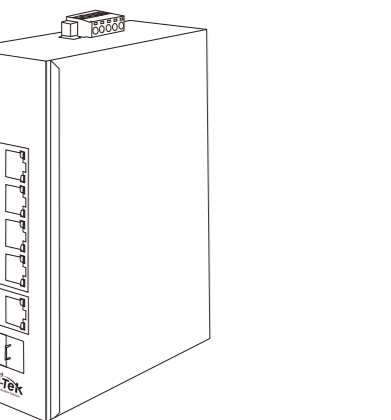


1 x Switch

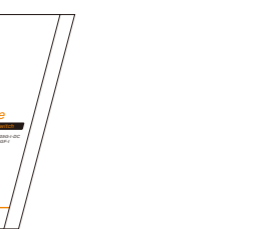

1 x Installation Guide

2. Interface and LED Indicator

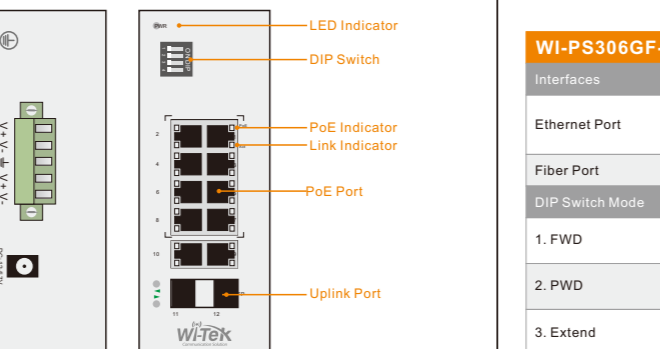

WI-PS302GF-I	
Interfaces	
Ethernet Port	1*10/100/1000 Base-T PoE+ RJ-45
Fiber Port	1*1000 Base-X SFP slot
DIP Switch Mode	
1. Fiber Watchdog	Monitor the fiber connection status, and if no data is transmitted, the port will restart automatically.
2. PoE Watchdog	All PoE ports enable PoE watchdog function, which can detect and reboot the offline compliant PoE powered devices.
3. Extend Mode	The transmission distance of PoE port can be up to 250m, but the rate is limited to 10Mbps.
4. 60W PoE Mode	Enable this function, the PoE port will output 60W PoE power. Disable this function, the PoE port output 802.3at 30W PoE power.
LED Indicators	
PW (Power indicator)	Off: the device is power off or failed On: the device power on is normal
V1/V2/V3 (Input power indicator)	Off: No power supply On: Power is supplying via V1/V2/V3 DC connector
Link Indicator	Off: ports link down On: ports link up Blinking: data on TX/RX
EX Indicator	Off: Extend mode is disabled. On: Extend mode is enabled.
SFP Indicator	Off: ports link down Green On: ports link up Blinking: data on TX/RX

WI-PS306GF-I	
Interfaces	
Ethernet Port	4*10/100/1000 Base-T PoE RJ-45 port Ports 1-2: 24V Passive / 48V 802.3 af/at PoE Ports 3-4: 802.3 af/at/bt 60W
Fiber Port	2*1000 Base-X SFP
DIP Switch Mode	
1. FWD	Monitor the fiber connection status, and if no data is transmitted, the port will restart automatically.
2. PWD	All PoE ports enable PoE watchdog function, which can detect and reboot the offline compliant PoE powered devices.
3. Extend	The transmission distance of PoE port can be up to 250m, but the rate is limited to 10Mbps.
4. VLAN	All downlink ports are isolated from each other, but can communicate with uplink ports.
LED Indicators	
PWR (Power indicator)	Off: the device is power off or failed On: the device power on is normal
P1/P2 (Input power indicator)	Off: No power supply On: Power is supplying via P1/P2 DC connector
Link Indicator	Off: ports link down On: ports link up Blinking: data on TX/RX
PoE Indicator	Off: PoE not working On: PoE working
5/6 (SFP Indicator)	Off: ports link down On: ports link up Blinking: data on TX/RX
PoE Max	On: PoE power full load

WI-PS310GF-I	
Interfaces	
PoE Port	8*10/100/1000 Base-T PoE RJ-45 port Ports 1-2: 24V Passive / 48V 802.3 af/at PoE Ports 3-4: 802.3 af/at/bt 60W Ports 5-8: 802.3 af/at PoE
Uplink Port	2*1000 Combo Base-X SFP
DIP Switch Mode	
1. 24/48	PoE output voltage adjustment DIP switch for port 1.
2. 24/48	PoE output voltage adjustment DIP switch for port 2.
3. Watchdog	All PoE ports enable PoE watchdog function, which can detect and reboot the offline compliant PoE powered devices.
4. Extend	The transmission distance of PoE port can be up to 250m, but the rate is limited to 10Mbps.
4. VLAN	The transmission distance of PoE port can be up to 250m, but the rate is limited to 10Mbps.
LED Indicators	
PWR (Power indicator)	Off: the device is power off or failed On: the device power on is normal
P1/P2 (Input power indicator)	Off: No power supply On: Power is supplying via P1/P2 DC connector
Link Indicator	Off: ports link down On: ports link up Blinking: data on TX/RX
PoE Indicator	Off: PoE not working On: PoE working
9/10 (SFP Indicator)	Off: ports link down On: ports link up Blinking: data on TX/RX
PoE Max	On: PoE power full load

WI-PS305G-I-DC	
Interfaces	
PoE Port	4*10/100/1000 Base-T PoE RJ-45 port Ports 1-4: 802.3 af/at/bt 90W
Uplink Port	1*10/100/1000 Base-T RJ-45 port
DIP Switch Mode	
1. PoE Watchdog	PoE watchdog, all PoE ports enable PoE watchdog function, which can detect and reboot the offline compliant PoE powered devices.
2. Port VLAN	All downlink ports are isolated from each other, but can communicate with uplink ports.
3. EX_1-2	The transmission distance of port 1-2 can be up to 250m, but the rate is limited to 10Mbps.
4. EX_1-4	The transmission distance of port 1-4 can be up to 250m, but the rate is limited to 10Mbps.
LED Indicators	
PWR (Power indicator)	Off: the device is power off or failed On: the device power on is normal
P1/P2 (Input power indicator)	Off: No power supply On: Power is supplying via V1/V2 DC connector
Link Indicator	Off: ports link down On: ports link up Blinking: data on TX/RX
PoE Indicator	Off: PoE not working On: PoE working

WI-PS206-I	
Interfaces	
Ethernet Port	4*10/100 Base-TX PoE RJ-45 ports Ports 1-4: 802.3 af/at/bt 90W Ports 2-4: 802.3 af/at PoE
Fiber Port	2*10/100 Base-TX RJ-45 ports
DIP Switch Mode	
1. PoE Watchdog	PoE watchdog, all PoE ports enable PoE watchdog function, which can detect and reboot the offline compliant PoE powered devices.
2. EX_1-4	The transmission distance of port 1-4 can be up to 250m, but the rate is limited to 10Mbps.
3. EX_1-2	The transmission distance of port 1-2 can be up to 250m, but the rate is limited to 10Mbps.
4. EX_1-4	The transmission distance of port 1-4 can be up to 250m, but the rate is limited to 10Mbps.
LED Indicators	
PW (Power indicator)	Off: the device is power off or failed On: the device power on is normal
V1/V2/V3 (Input power indicator)	Off: No power supply On: Power is supplying via V1/V2/V3 DC connector
Link Indicator	Off: ports link down On: ports link up Blinking: data on TX/RX
PoE Indicator	Off: PoE not working On: PoE working
VLAN	Off: VLAN mode is disable. On: VLAN mode is enable.
Extend	Off: Extend mode is disable. On: Extend mode is enable.

WI-PS208-I	
Interfaces	
PoE Port	8*10/100 Base-TX PoE RJ-45 ports Ports 1-2: 802.3 af/at/bt 90W Ports 3-8: 802.3 af/at PoE
DIP Switch Mode	
1. PoE Watchdog	PoE watchdog, all PoE ports enable PoE watchdog function, which can detect and reboot the offline compliant PoE powered devices.
2. EX_1-4	The transmission distance of port 1-4 can be up to 250m, but the rate is limited to 10Mbps.
3. EX_1-6	The transmission distance of port 1-6 can be up to 250m, but the rate is limited to 10Mbps.
4. VLAN	All downlink ports are isolated from each other, but can communicate with uplink ports.
LED Indicators	
PW (Power indicator)	Off: the device is power off or failed On: the device power on is normal
V1/V2/V3 (Input power indicator)	Off: No power supply On: Power is supplying via V1/V2/V3 DC connector
Link Indicator	Off: ports link down On: ports link up Blinking: data on TX/RX
PoE Indicator	Off: PoE not working On: PoE working
VLAN	Off: VLAN mode is disable. On: VLAN mode is enable.
Extend	Off: Extend mode is disable. On: Extend mode is enable.

WI-PS206GF-I	
Interfaces	
PoE Port	4*10/100 Base-TX PoE RJ-45 ports Ports 1-4: 802.3 af/at PoE
Uplink Port	1*1000 Base-X SFP slot 1*10/100/1000 Base-T RJ-45 port
DIP Switch Mode	
1. 250m	The transmission distance of port 1-4 can be up to 250m, but the rate is limited to 10Mbps.
2. VLAN	All downlink ports are isolated from each other, but can communicate with uplink ports.
3. Watchdog	PoE watchdog, all PoE ports enable PoE watchdog function, which can detect and reboot the offline compliant PoE powered devices.
4. Priority	Port PoE power supply priorities are in descending order.
LED Indicators	
PWR (Power indicator)	Off: the device is power off or failed On: the device power on is normal
Link Indicator	Off: ports link down On: ports link up Blinking: data on TX/RX
PoE Indicator	Off: PoE not working On: PoE working
6 (SFP Indicator)	Off: ports link down On: ports link up Blinking: data on TX/RX


Grounding

For better protection performance, it is recommended as follows.

- Do not damage the ground conductor or operate the device in the absence of well installed ground conductor. Conduct the appropriate electrical inspection.
- When operating the unit, always make the ground connection first and disconnect it at the end.

3. DIN-rail Installation

- Please follow the steps below.

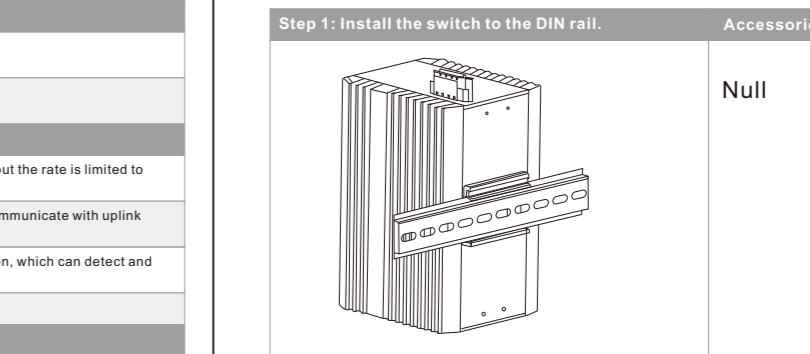

4. DC Power Cable Connection



This switch can work with 37~57V DC power, the DC power connection processes are as follows.

- Before installation, ensure that the device is disconnected from the power supply.
- Connect one end of the protective grounding cable to the grounding screw on the side panel of the device, and the other end is well grounded nearby.
- Connect the positive and negative wires of DC power separately to the "+" and "-" power terminal of 48~57V power 1 or 37~57V power 2 on the switch as following figure, using screw driver to screw stably.
- The redundant power can be both connected with the DC power, so that one power supply can still work in case the other one fails.
- Turn on the DC power, and check if power supply indicator of power 1 or power 2 turns on, which means the main power (Power 1) or backup power (Power 2) is connected correctly.

Note: For WI-PS206GF-I and WI-PS212GF-I, V1 and V2 DC interface cannot be connected to the power supply at the same time.

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within three months after purchase, we will provide you a new product of the same model.
- If the product defects within the three-year warranty period, we will provide the professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disaster, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card losing will disqualify the product from limited warranty.



Wireless-Tek Technology Limited
Address: Room 402 4F, Biaofan Technology Building, Bao'an Avenue, FuYong Town, Bao'an district, ShenZhen
Website: www.wireless-tek.com
Tel: 86-0755-32811290
Email: sales@wireless-tek.com
Technical Support: tech@wireless-tek.com